










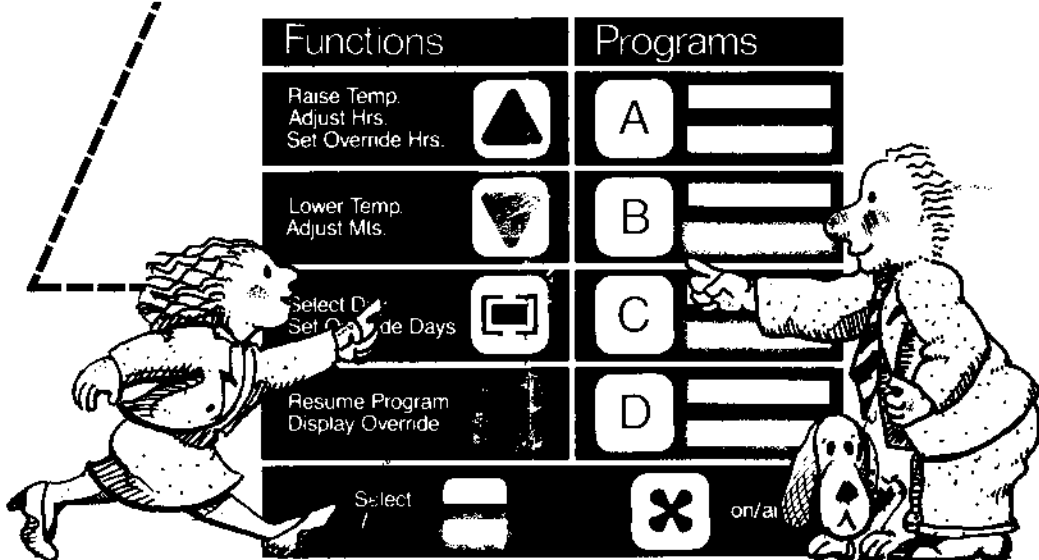


K3W



enerstatTM

Functions	Programs
Raise Temp. Adjust Hrs. Set Override Hrs. 	A 
Lower Temp. Adjust Mts. 	B 
Select D Set Override Days 	C 
Resume Program Display Override 	D 
Select 	 on/at 



Programmable Single Stage Heat/Cool Thermostat Model K3W

Index

PROGRAMMING INSTRUCTIONS

Helpful Hints	1
Introduction	1
Know Your Thermostat	2
Display	2
Slide Switches	3
Control Buttons	3
Selecting your heat/cool system	3
Set Your Personal Schedule	4
Battery Installation and Begin Programming Steps 1 to 10	5 to 9
Thermostat Start Up	5
Using Some Special Features	10
Fan Operation	10
Battery Symbol	10

INSTALLATION INSTRUCTIONS

Thermostat Location	11
Connecting Thermostat	12
Setting Slide Switches	13
Battery Installation and Start Up	14
Checking Installation	14

TROUBLE SHOOTING GUIDE

Trouble Shooting	15
Specifications	16
Warranty (inside back cover)	

Programming instructions

Helpful hints

Please take the few minutes required to read the programming instructions. Experience has shown that users who do read the instructions have no difficulty in programming and using their thermostat. Then find a convenient place to hang your Instruction Manual so that you can easily refresh your memory at a later date.


Introduction

Your new thermostat contains a microcomputer that will automatically adjust the temperature of your home or office, up to four times each day, to suit your needs and at the same time save money and energy. It provides comfortable heating or cooling when you need it, and reduces energy expenditure while you are sleeping, or are out of the building, or on vacation. Your thermostat has separate weekend programming - we call it 5-1-1 so that 5 weekdays are the same, and then 2 successive days can each be different.

You can **OVERRIDE** or **SUPERSEDE** these settings whenever you wish to vary the schedule. If you have guests during the evening and you do not want the temperature to drop while they are visiting, the touch of a finger to your evening setting (for example 70°F or 21°C) will **OVERRIDE** your program and keep the temperature at its current setting until after your guests have gone. In addition, you can keep the temperature at a constant setting for any period from one hour up to 31 days using the **TIMED OVERRIDE** feature, explained on page 9.

We also recommend that everyone in the family read the instructions and, before installation, (by inserting the battery and following the programming steps) put in a program of their choice. You will soon know how truly simple it is to operate your thermostat.

The thermostat should then be installed. We recommend that a qualified technician install the thermostat because it is very important that it is properly located and all heating and cooling circuits are wired correctly. For **INSTALLATION INSTRUCTIONS** start on page 11.

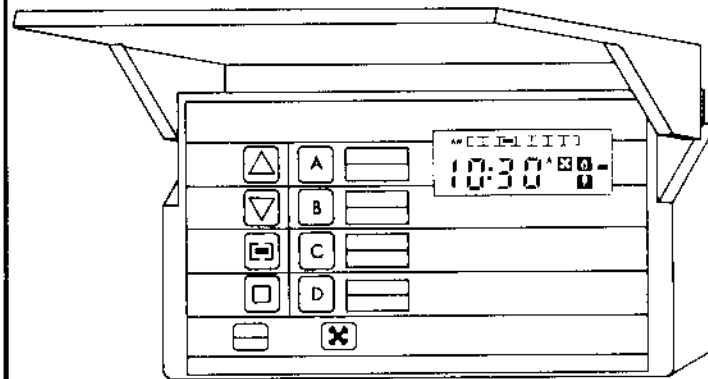

Know your thermostat

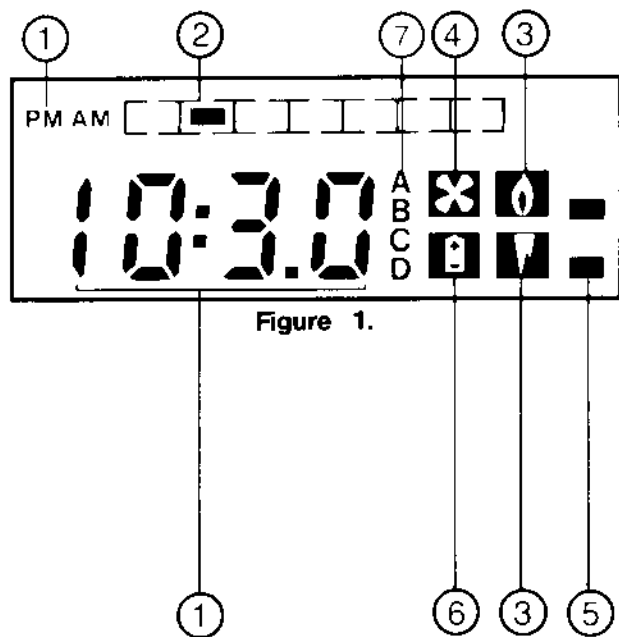


Figure 1.

Display


- ① The time of day AM or PM and the actual room temperature are displayed alternating at 4 second intervals in normal operation, and the decimal or colon are constantly blinking when temperature and time respectively are shown.
- ① A set temperature and the time are displayed when programming. Nothing is blinking. The factory setting for all programs is 70°F or 20°C in heating, 74°F or 22°C in cooling and 6:00 AM.
- ① The duration of timed override is displayed. Nothing blinks. (see timed override page 9).
Note: decimal point is displayed and not a colon as in a time display.
- ② Day of week, shows the 'day indicator' at beginning of 5 day program, typically Monday of the 5 days of the week.
- ③ Mode symbols, indicating system in heating (flame) heating and cooling (flame and icicle) cooling (icicle) or off mode (no symbols).
- ④ Fan symbol shows when the fan is in the 'on' continuous mode.
- ⑤ Indicators showing when heating (top bar) or cooling (bottom bar) is operating.
- ⑥ Indicates when unit is operating on the battery (thermostat is not installed or the power is off). When battery needs to be replaced, the symbol is flashing.
- ⑦ Indicates the program A, B, C, or D in which the thermostat is operating.

Slide switches

The slide switches 1 to 3 are accessed from the rear of the front unit of the thermostat. They have been preset at the factory for the most frequently used settings and **should only be changed by the installer.**

However, if you wish to review the options, see page 13, and note that, if you desire a change, switches must be preset before the battery is installed.

Fig. 2 Rear View of Front Unit

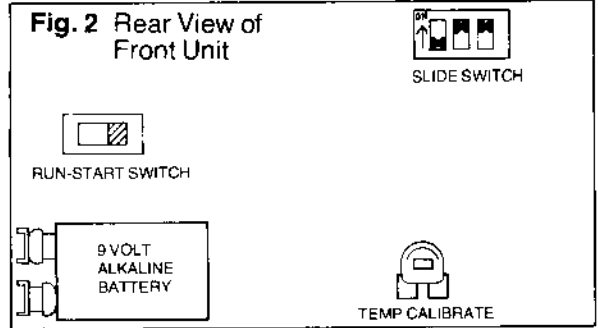

Control buttons

There are Function buttons on the left and Program buttons on the right. Each button has multiple uses.

- Raises temperature, adjusts hours, sets override hours
- Lowers temperature, adjusts minutes
- Push to advance the day indicator to the correct day of week, sets override days when override is displayed
- Pressing once will resume program
Pressing a second time will display timed override
- The program buttons A, B, C and D are used to gain access to programs in order to;
 - enter a program
 - override a program
 - change or check a program
-
-
-

Functions	Programs
Raise Temp Adjust Hrs. Set Override Hrs.	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

Front view

Selecting your heat/cool system

By consecutively pressing and releasing the button the following symbols will appear:

COOL AUTO HEAT



With no heat or cool symbols displayed, the system is off.

With the fan button , you set the fan to continuous operation (ON mode) and the fan symbol is displayed. In the 'auto' mode, no fan symbol will be displayed and the fan operates or cycles as the system demands.

Functions	Programs
Raise Temp Adjust Hrs. Set Override Hrs.	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto



Set your personal schedule

Typical residential schedule

Figure 3.

DAYS	PROGR.	HEAT°	COOL°	START TIME	AM/PM
Weekdays [] [] [] [] [] or any 5 consecutive days:	A	70	74	6.00	AM
	B	60	80	8.30	AM
	C	70	74	4.30	PM
	D	60	80	11.00	PM
Saturday [] [] [] [] [] [] [] or day following 5 consecutive days:	A	71	75	7.00	AM
	B	70	74	7.00	AM
	C	70	74	11.00	AM
	D	60	80	7.00	AM
Sunday [] [] [] [] [] [] [] or day preceding 5 consecutive days:	A	71	75	7.00	AM
	B	70	74	7.00	AM
	C	70	74	7.00	AM
	D	60	80	11.00	PM

Typical office schedule

DAYS	PROGR.	HEAT°	COOL°	START TIME	AM/PM
Weekdays [] [] [] [] [] or any 5 consecutive days:	A	70	74	7.00	AM
	B	72	76	7.00	AM
	C	68	72	7.00	AM
	D	60	80	8.00	PM
Saturday [] [] [] [] [] [] [] or day following 5 consecutive days:	A	70	74	7.00	AM
	B	72	76	7.00	AM
	C	68	72	7.00	AM
	D	60	80	7.20	AM
Sunday [] [] [] [] [] [] [] or day preceding 5 consecutive days:	A	70	74	7.00	AM
	B	72	76	7.00	AM
	C	68	72	7.00	AM
	D	60	80	7.20	AM

NOTE:

Put different temperatures in unused programs to provide greater selection, when using timed override.

The first thing to do before programming your thermostat is to determine your own personal comfort levels for each day as to temperature and time. Figure 3 is a typical schedule.

After the temperature has been lowered all night, it would be typical to have the thermostat begin to warm the house at 6:00 AM, if you get up at 7 AM. At 8:30 AM before everyone has left for the day, the thermostat can be set to lower the temperature to save you energy during the day. Before anyone arrives home in the afternoon, the temperature may again be increased to provide comfort for you when you return. Finally, at bedtime, the thermostat again lowers the temperature to save you energy all night.

Figure 4 is a blank form for you. Start with weekdays, and write in your personal comfort level, and the time you want the furnace (or air conditioner) to come on in the morning to bring your home to that temperature. It is suggested that you set your desired program times about 1 hour before the time you actually require your home to reach the set temperature. So if you get up at 7 AM, set the furnace to come on at 6 AM.

Then write in the Saturday and Sunday settings.

Fill in this chart to help program your schedule

DAYS	PROGR.	HEAT°	COOL°	START TIME	AM/PM
Weekdays [] [] [] [] [] or any 5 consecutive days:	A				
	B				
	C				
	D				
Saturday [] [] [] [] [] [] [] or day following 5 consecutive days:	A				
	B				
	C				
	D				
Sunday [] [] [] [] [] [] [] or day preceding 5 consecutive days:	A				
	B				
	C				
	D				

Figure 4.

Begin programming


Battery installation and startup


1. Separate the thermostat front unit from the mounting plate (page 12 figure 13).
2. Install the battery. (Page 13 shows location)
3. Operate the RUN-START switch back and forth and leave in RUN position.
4. Ensure that the display is flashing once per second as in figure 5. (If it is not, repeat step 3).



Figure 5. Display on start-up



STEP 1.

 Press the  button and observe the time and temperature alternating every 4 seconds.





Actual temperature

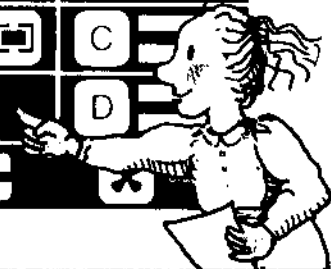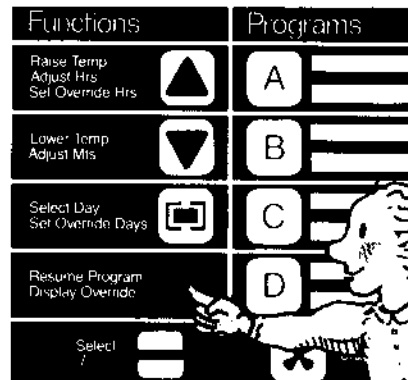
Time




STEP 2. Set correct time of day

When the display is showing time, press and hold the  button, until the hour digits advance to the correct hour, ensuring that AM/PM indicator is correct. (This button will not affect minutes).

Again when the time is displayed, press and hold  button until the minute digits advance to the correct minute. (This button will not affect the hours).

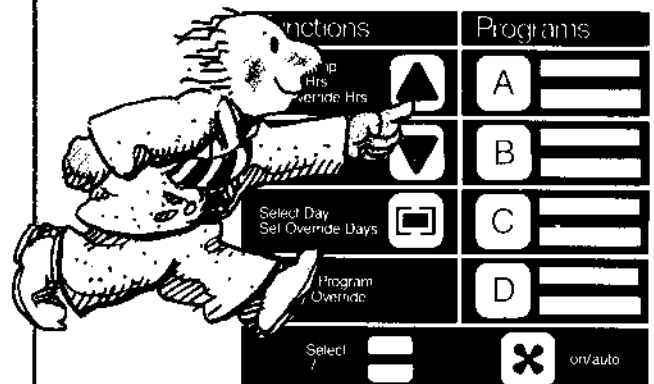

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	X on/off

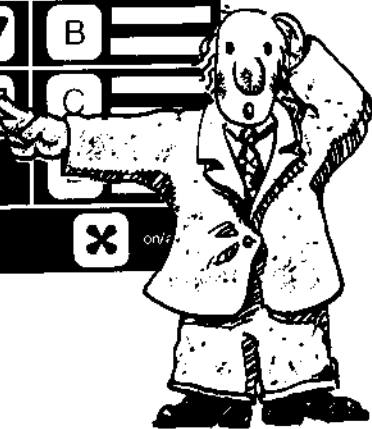

STEP 3. Set correct day of week

Press the button, and advance the day indicator to the correct day of the week. Figure 6 shows the indicator at Monday.


 


Figure 6.

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	X on/off

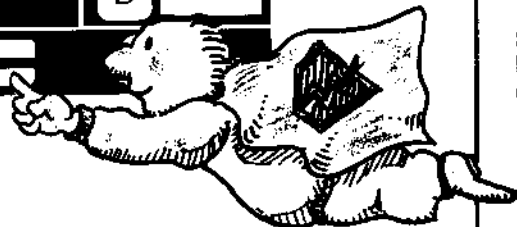

STEP 4. Select heat/ cool system

By consecutively pressing and releasing the button the following symbols will appear in this order on your display.

COOL	AUTO	HEAT

Select and display your system requirements ie, heat only, cool only, or heating and cooling (auto change over).

NOTE

- The battery symbol will show when power is off.
- Battery symbol will flash to indicate weak battery.
- When no heat or cool symbol is displayed, the system is off.
- If you have only or only displayed, you will program one temperature and the time. If you have both and (auto change over) you will program first heat, then cool, and then time.

STEP 5. Enter your program for 5 weekdays



(1) If your system selection is cool only, skip substeps (2) to (4) and begin at (5).

(2) Press and release **A**. You will observe a display as in figure 7.

(3) Press **▲** to raise or **▼** to lower to the desired temperature.

Caution

- Setting below 51°F or 10.5°C shuts system off.
- Setting below 55°F or 12°C may freeze pipes.

(4) If your system selection is heat only, skip substeps (5) and (6) and proceed to (7).

(5) Press and release **A**. You will observe the display as in figure 8.

(6) Press **▲** to raise or **▼** to lower to the desired temperature.

(7) Press and release **A**. You will observe the display as in figure 9.

(8) Press **▲** to advance the hours and **▼** to advance the minutes (10 minute increments) to the desired start time. You have now entered the "A" program for 5 days into the computer memory.

Repeat step 5 substituting **B**, **C** or **D** for **A**.

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

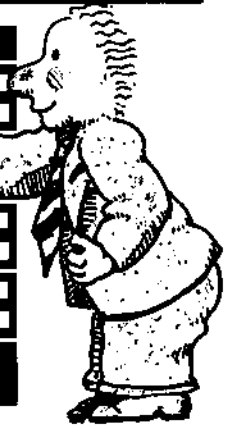



Figure 7. Heat set point



Figure 8. Cool set point




Figure 9. Time

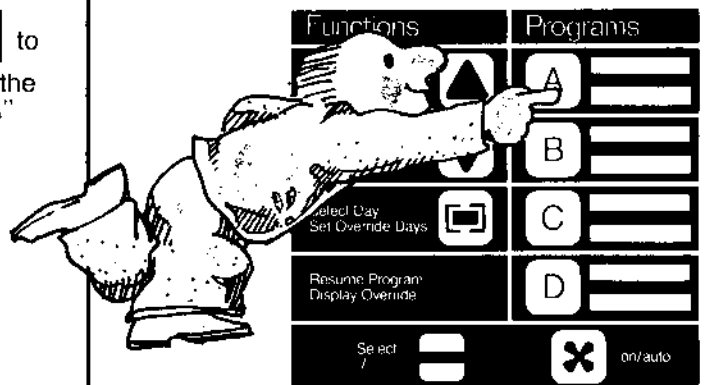


Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

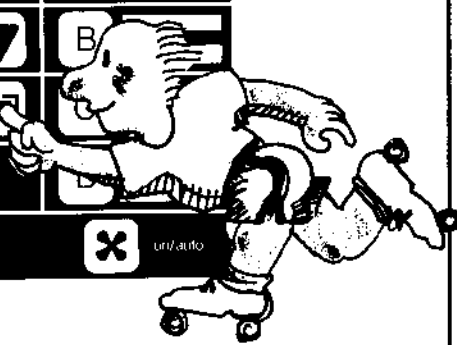


STEP 6. Enter program for Saturday




Press  and advance the day indicator to the right hand position. Now follow step 5 for programs A,B,C and D for Saturday.

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

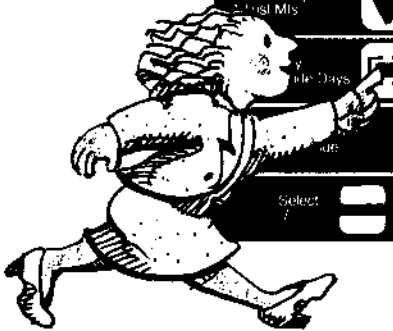


STEP 7. Enter program for Sunday




Press  again and advance the day indicator to the left hand position. Now follow step 5, for programs A,B,C, and D for Sunday.

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

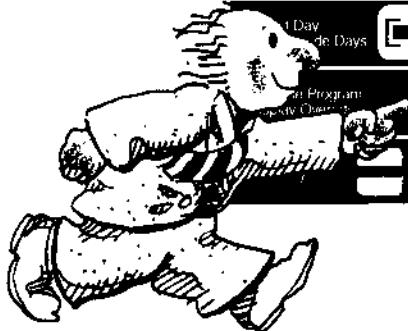

STEP 8. Return to normal operations

Press  and the display will alternate between temperature and time and control of your environment will now be automatic as programmed.

STEP 9. Continuous override

At any time you may override the scheduled program by merely pressing the program button **A**, **B**, **C** or **D** with the temperature you wish to hold. The display will then only show that temperature. The temperature will now control continuously at the selected program temperature until you press **■** (unless you have used the timed override feature, in which case the normal program will resume after the override time has elapsed).

Enter timed override

While it is not necessary for normal operations, timed override is a very convenient feature and its use is strongly recommended.

(1) Press **■** until you observe your display as in figure 10.

(2) Press and hold **▲** until the desired hours of override are shown in the two right digits as in figure 11.

(3) Press **☐** until the desired days are shown.

Figure 11 shows a recommended typical setting of 3 hours of timed override and no days.

Any time the override is used, (by simply pressing

button **A**, **B**, **C** or **D** which has the desired temperature) the temperature called for will control for 3 hours and then the normal program will resume again.

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

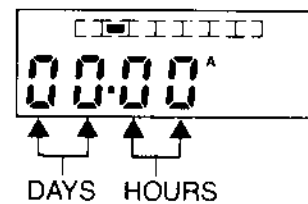


Figure 10.
Display of timed override

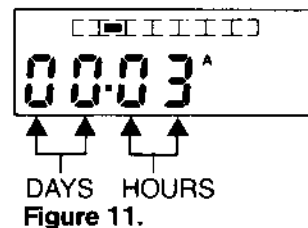


Figure 11.



STEP 10. Verify your programs

1. Press **A** and check that it now shows your desired heat set point, for your 5 day program.

Press **A** again and check your cool set point.

Press **A** again and check your time.

(2) Repeat for programs B, C, and D.

(3) Repeat for Saturday and Sunday programs, after pressing **☐** to advance to the desired day.

(4) Record your program in pencil on the thermostat (figure 12).

Simply pressing **■** returns to programmed operation.

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto

Figure 12.





Using some special features

Functions	Programs
Raise Temp Adjust Hrs Set Override Hrs	A
Lower Temp Adjust Mts	B
Select Day Set Override Days	C
Resume Program Display Override	D
Select	on/auto



Fan operation

To select FAN ON press . The fan will operate continuously and the fan symbol will be displayed. To select FAN AUTO, which operates the fan only when the system is running, press  a second time and the fan symbol will disappear.

Battery symbol

The battery symbol indicates two conditions. If it is flashing, it indicates a missing or low battery condition. When this condition occurs, go to BATTERY INSTALLATION AND START-UP for instructions on how to replace the battery. If the battery symbol is displayed continuously, it indicates that the power is off and that the thermostat is maintaining its memory using the battery. A fresh battery will last 5 to 10 days without power to the thermostat. With continuous power the battery should last two to three years.
Caution: use 9 volt alkaline battery only.

Notes:

Installation instructions

- Disconnect power supply to systems before beginning installation to prevent personal injury or death from electrical shock or entanglement in moving parts and to prevent equipment damage.
- Ensure control voltage is 20-30 Vac.
- We recommend installer be a trained, experienced service technician.


Thermostat location

To ensure proper operation, the thermostat should be mounted on an inside wall in a frequently occupied area of the building. In addition, its position must be at least 18 inches from any outside wall, and approximately five feet above the floor in a location with freely circulating air of an average temperature. Be sure to avoid the locations described below when determining a site for the thermostat.

CAUTION: ZONE INTEGRITY MUST BE MAINTAINED TO EFFICIENTLY CONTROL UNITS OR GROUPS OF UNITS. UNLESS ZONES OF CONTROL ARE CONSIDERED AND ACCOUNTED FOR, ADJACENT UNITS MAY OPERATE IN HEATING AND COOLING MODES SIMULTANEOUSLY.


Do not locate the thermostat

- behind doors or in corners where freely circulating air is unavailable.
- where direct sunlight or radiant heat from appliances might affect control operation.
- on an outside wall.
- adjacent to, or in line with, conditioned air discharge grilles, stairwells, or outside doors.
- where its operation may be affected by steam or water pipes or warm air stacks in an adjacent partition space, or by an unheated/uncooled area behind the thermostat.
- where its operation will be affected by the supply air of an adjacent unit.
- near sources of electrical interference such as arcing relay contacts.

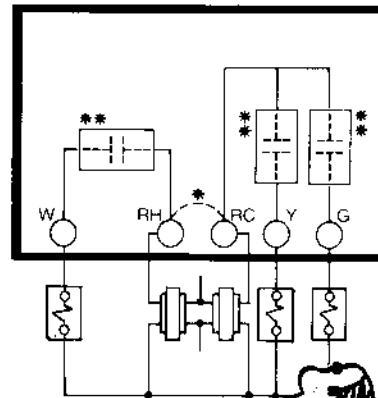

Connecting thermostat

Figure 14.
Typical connections for 1-stage
heat, 1-stage cool system

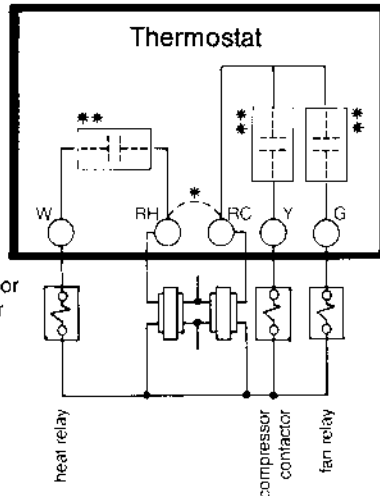

* jumper RC & RH for
single transformer
systems
** solid state switch
(not accessible)

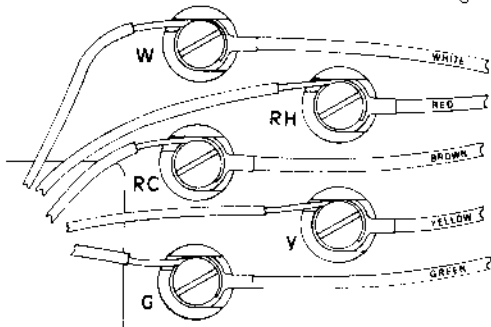


Figure 15a. Five wire two transformer system

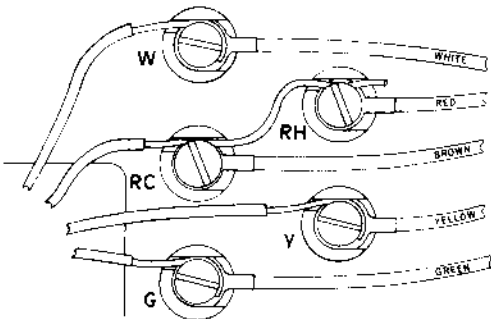


Figure 15b. Four wire single transformer system.
Note: jumper RC & RH.

1. Make sure the power to the systems is off.

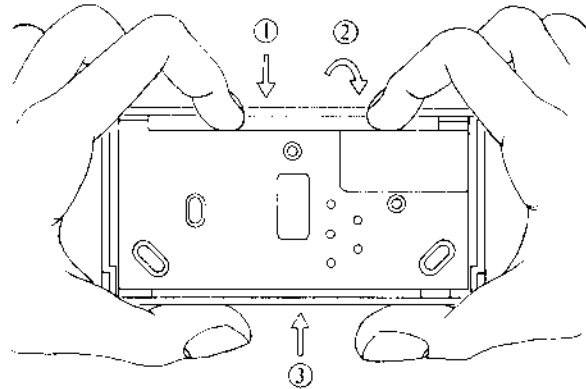


Figure 13. Removal of Mounting Plate
(thermostat lying face down on flat surface)

2. Pull front unit off of mounting plate.

3. For new installation, identify wires as per
table 1. For replacement, identify wires before
removing old thermostat.

4. Position the mounting plate so that all the control
wires protrude through the centrally located
slot (figure 15) Level for appearance and mark the
three mounting holes or use the template for
locating the holes (back cover). Drill holes using
a 3/16" (5mm) drill bit. Install supplied anchors,
reposition the mounting plate and secure it to the
wall. Do not overtighten screws.

5. Connect the control wires to the proper
terminals (figure 14), by backing out each
terminal screw and wrapping the respective
control wire around it.

Table 1


SYMBOL	OUTPUT TERMINAL DESCRIPTION
G	Energized when fan switch is on or when Y or W is energized. See fan option.
Y	Energized when cooling is required.
RC	24 Vac connection for cooling and fan transformer (Jumpered to RH for single transformer systems).
RH	24 Vac connection from equipment transformer. —
W	Energized when heating is required. —

Setting slide switches

CAUTION: DO NOT INSTALL BATTERY UNTIL SLIDE SWITCHES INDICATED ARE SET!


6. There are a number of options that you can select with the slide switches. They slide up and down very easily using a pen. The ON position is marked on the block that encloses the switches (figure 16). Set the slide switches using the information in figure 16 as your guide.

Figure 16.

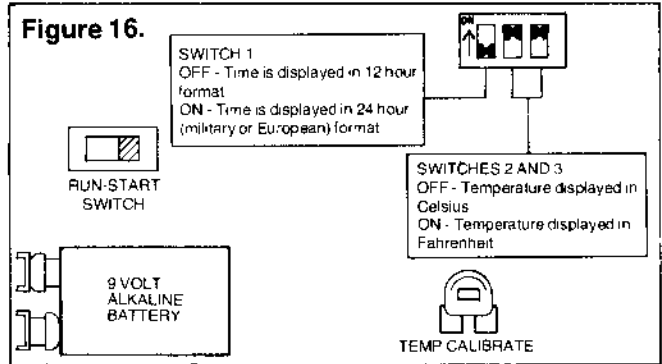

Fan Option

Figure 17. Fan Option

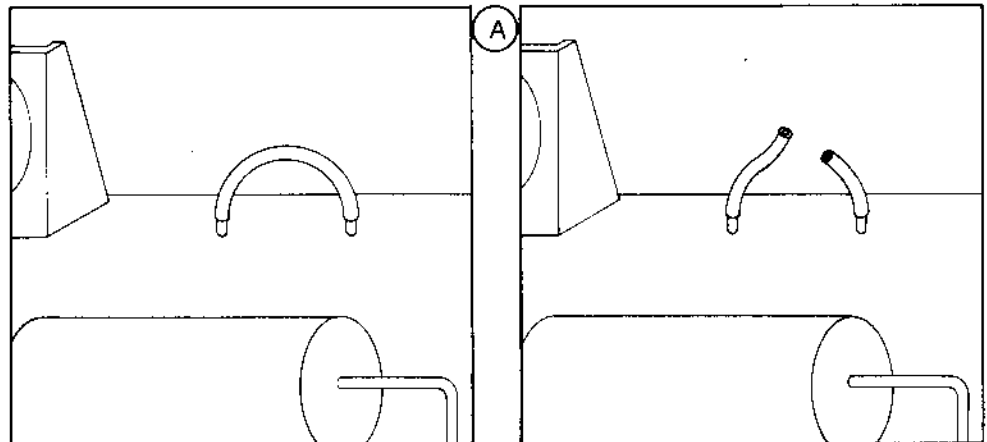


Fan on with call for heat

Fan controlled by heating system

Figure 17 shows a wire loop which, when connected, will cause the fan to come on immediately with a call for heat.

If the fan is to be controlled by the heating system, cut or disengage the wire loop.

Your thermostat will have either the **A** or **B** configuration.

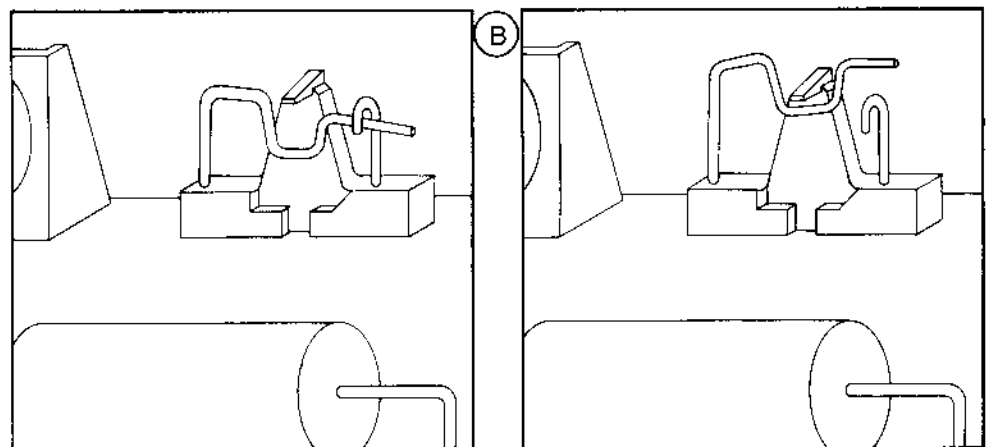


Fan on with call for heat

Fan controlled by heating system

Battery installation & start-up

Figure 18. Start-up display

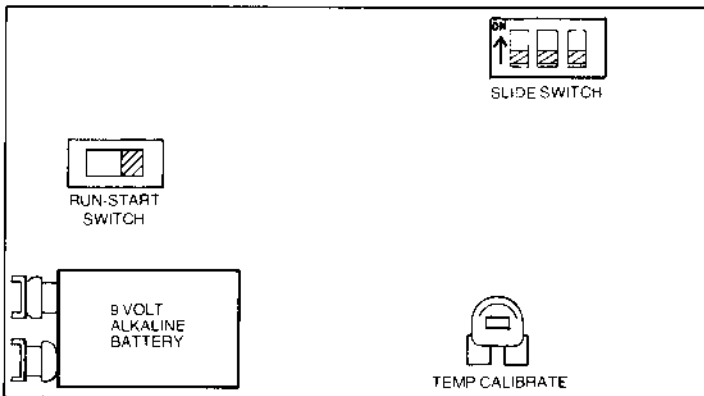

7. Install the battery.
8. Operate the RUN-START switch. Move to the START position. Wait, then move it to the RUN position and leave it there.
9. Ensure the display is flashing once per second (figure 18). If it is not, repeat step 8.
10. Push the RESUME button and the display will alternate every 4 seconds between room temperature and time.
11. Replace the thermostat front unit on mounting plate.

Note: Keep the five control wires away from the battery area.

Table 2

STEP	PUSH BUTTON	DISPLAY SHOWS	RESPONSE
1			Cool mode
2			Auto heat/cool mode
3			Heat mode
4		(no symbol)	All systems go off after 7 seconds.
5		select required mode (step 1, 2, or 3) for further testing	
6		Stationary 70 or 74 (20.0 or 22.0)	Heating and cooling set-points. Room temperature will be maintained at these set-points
7	 	Increase or decrease of set point temperature	Equipment will respond subject to time delays
8	 hold		<p>REDUCING BUILT-IN TIME DELAY:</p> <ol style="list-style-type: none"> 1. The unit must be in °F (Slide switches 2 and 3 on). 2. Select either heat or cool to be tested 3. Raise or lower heat or cool setpoint 10° in 4. Press and hold the until system energises, (Page 2 no. 5) 5. Equipment will now operate subject to its own delays.
9			Fan runs continuously
10		(no FAN symbol)	Fan operates automatically

Checking installation

CAUTION: UNIT HAS BUILT-IN TIME DELAYS FOR HEAT AND COOL. THEY MAY VARY DEPENDING ON ROOMTEMP RISE OR FALL. DELAYS CAN BE FROM 3 TO 15 MIN. PER STAGE.

Follow the checkout procedure outlined in Table 2. The thermostat should be in the OFF mode. When the system power is turned on the battery symbol should disappear or flash if the battery is weak or missing. Minimum on and off times have been built into the thermostat to prevent HVAC equipment damage due to short cycling. These delays may be longer than specified if the HVAC equipment has built in delays.

Trouble shooting guide

SYMPTOM	CAUSE	ACTION
UNIT APPEARS TO BE OKAY BUT WILL NOT ACTIVATE RELAYS OR RELAYS CHATTER	1) SOLID STATE SWITCH FAILURE 2) HIGH RESISTANCE AT EQUIPMENT	— REPLACE UNIT — INSTALL RELAY
HEAT OR COOL STATUS INDICATORS WILL NOT APPEAR	1) BUILT IN TIME DELAYS	— OVERRIDE USING TIME DELAY SPEED UP.
SYSTEM CYCLES BEFORE REACHING SET POINT	BUILT IN COMPUTER RECOVERY	UNIT OPERATING NORMALLY
DISPLAY FLASHING-PROGRAM LOST	STATIC OR ELECTRICAL STORM	— DISCHARGE BEFORE TOUCHING STAT! — OPERATE RUN-START SWITCH
TEMPERATURE READING INCORRECT	1) OUT OF CALIBRATION 2) EXTERNAL HEAT SOURCE 3) DOWN DRAFT AT THERMOSTAT	— RECALIBRATE WITH ACCURATE THERMOMETER. — ISOLATE STAT FROM HEAT SOURCE OR OVERHEAD DIFFUSERS.
BLANK DISPLAY	1) START-RUN SWITCH LEFT IN START POSITION 2) BATTERY DEAD 3) STATIC ELECTRICITY	— PLACE IN RUN POSITION — TEST AND REPLACE — RESET WITH START-RUN SWITCH
DISPLAY READING 24 HR FORMAT	SLIDE SWITCH 1 IN THE "ON" POSITION	SET IN "OFF" POSITION IF DESIRED
STAT WILL NOT RETURN FROM SET BACK	1) OVERRIDE SET FOR DAYS 2) WRONG DAY OF WEEK	— PRESS RESUME, REMOVE DAYS FROM MEMORY. — PRESS DAY KEY & ADVANCE TO CORRECT DAY.

When replacing battery, maintain power to system to avoid losing your program.

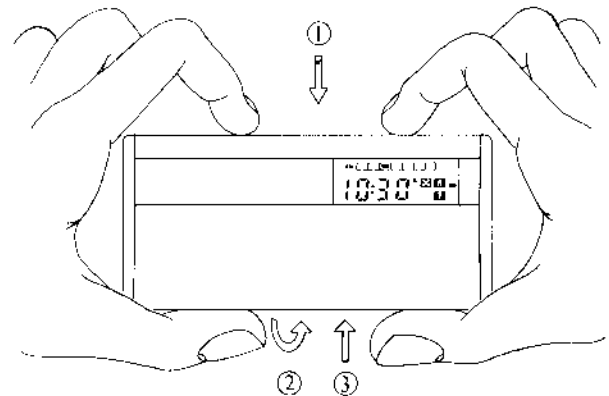


Figure 20. Removal of front unit for replacing battery or servicing after installation.

Specifications

Rated voltage	20 – 30 Vac
Rated current	0.050 – 1.5 Amp continuous for each output with surges to 4 Amps
Cycle rate	3 CPH cooling 6 CPH heating
Minimum on/off times to prevent short cycling	6 minutes for cooling 3 minutes for heating
Maximum recovery rate	6°F (3°C)/hr cooling 12°F (6°C)/hr heating
Control range	
Heating	51 to 106°F in 1° steps or 10.5 to 38°C in 0.5° steps
Cooling	55 to 110°F in 1° steps or 12.5 to 40°C in 0.5° steps
Temperature measurement range	50 to 113°F or 10 to 41.5°C
Accuracy	±0.5°F ± 0.05°F/°F difference from 70°F
Battery	9 volt ALKALINE (Eveready # 522 or equivalent) for memory retention during power outage
Quartz clock accuracy	± 80 seconds/month
Range of ambient operation	32 to 131°F (0 to 55°C)
Storage temperature	– 30 to 131°F (– 34 to 55°C)
Operating humidity range	5 to 90% RH

Warranty

Full one year warranty. Valera Electronics Inc. warrants to the original purchaser that its ENERSTAT™ and components parts will be free from defects in workmanship and materials for a period of one year from the date of purchase. Your dealer will provide free replacement of your ENERSTAT upon proof of purchase.

Limited 4 year Warranty

Valera Electronics Inc. offers a limited warranty for an additional 4 years. For details contact your dealer.

Exclusions

This warranty does not apply in the event of misuse, abuse or as a result of unauthorized alterations or repairs. Valera Electronics Inc. will not be liable for any consequential damages including, without limitation, damages resulting from defects, loss of use, or misuse.

Valera Electronics Inc. manufactures similar products for Original Equipment Manufacturers. Such products may not be interchangeable with similar Valera products, and should be changed with products of such O.E.M.

This equipment, if installed in strict accordance with the manufacturers instructions, complies with the limits for a Class B computing device pursuant to Subpart J of Part 15 of FCC rules.

enerstat™

Developed and manufactured by
Valera Electronics Inc.,
5370 Canotek Road,
Ottawa, Canada K1J 8X7

Valera Corporation
Suite 103
Bridge and Port Authority Building
Ogdensburg, New York 13669

Valera Corporation Australia Pty. Ltd.
Southeast Asia
57 Lorraine Drive, Burwood East 3151
Victoria, Australia

Valera Europe B.V.
Europe, Verlaat 9
2435 XE Zevenhoven
Netherlands