



# Manual Two Zone Switch Individual Zone's or Average.

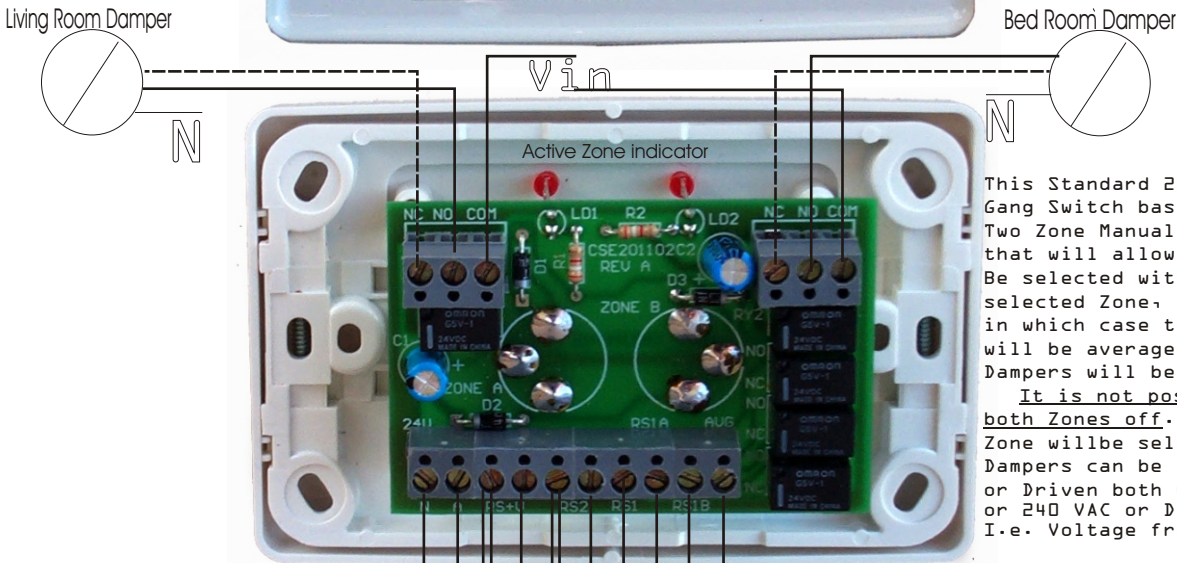


This Standard 2000 series 2 Gang Switch base accommodate a Two Zone Manual Zone Control that will allow either Zone to Be selected with sensing in the selected Zone, or both Zones, in which case the two sensors will be averaged and both Zone Dampers will be open.

It is not possible to turn both Zones off. If attempted a Zone will be selected as default. Dampers can be Spring Return or Driven both ways and are 24 or 240 VAC or DC. I.e. Voltage free contacts.

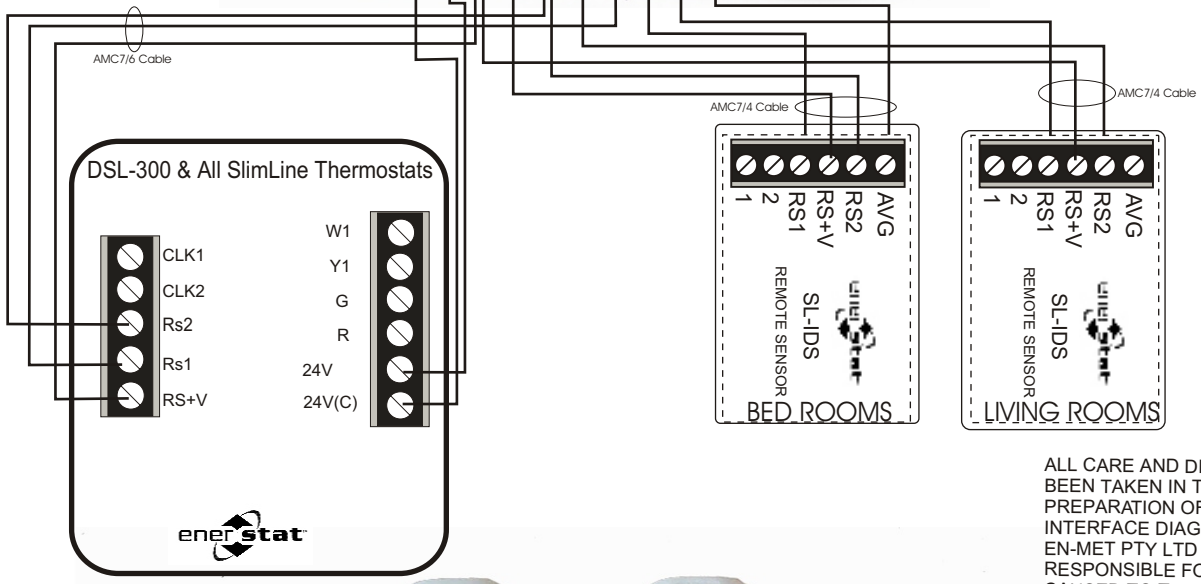

ALL CARE AND DILIGENCE HAS BEEN TAKEN IN THE PREPARATION OF THIS INTERFACE DIAGRAM. EN-MET PTY LTD WILL ONLY BE RESPONSIBLE FOR DAMAGE CAUSED TO THE enerstat PRODUCT, AND ONLY IF IT HAD BEEN CORRECTLY APPLIED IN ACCORDANCE WITH THE MANUFACTURES INSTRUCTIONS. IT IS THE DEALER / CONTRACTORS SOLE RESPONSIBILITY TO ENSURE CORRECT OPERATION OF THE MAJOR EQUIPMENT IS MAINTAINED.

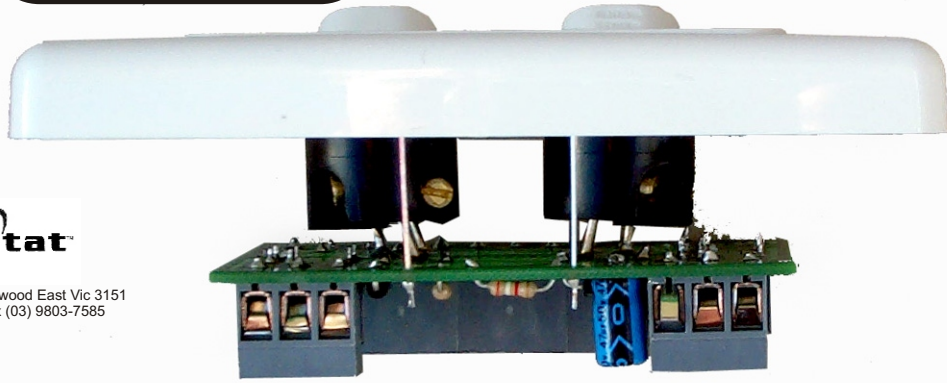

37 Benwerrin Drive Burwood East Vic 3151  
Ph (03) 9803-5744 Fax (03) 9803-7585